


*Thank you for purchasing this Autel tool. Our tools are manufactured to a high standard and — when used according to these instructions and properly maintained — will provide years of trouble-free performance.*

### Getting Started



**IMPORTANT:** Before operating or maintaining this unit, please read these instructions carefully, paying extra attention to the safety warnings and precautions. Failure to use this product properly may cause damage and/or personal injury and will void the product warranty.

1

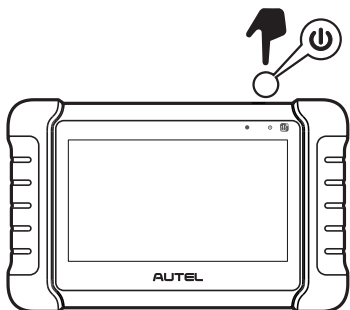


- Press and hold the **Lock/Power** button to turn on the tablet.

2



- Scan the QR code above to visit our website at [pro.autel.com](http://pro.autel.com).
- Create an Autel ID and register the product with its serial number and password.

3

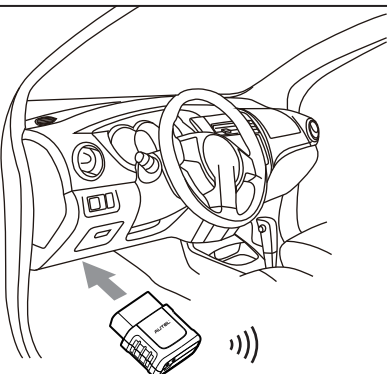

- Insert the MaxiVCI Mini into the vehicle's DLC, which is generally located under the vehicle dashboard.

4



- Pair the tablet with the VCI device via Bluetooth to establish a communication link.
- When the VCI device is properly connected to the vehicle and the tablet, the VCI status button on the bottom bar of the screen will display a green badge at the corner indicating the tablet is ready to start vehicle diagnosis.



Please download the **Maxi PC Suite software** from

[www.autel.com](http://www.autel.com) > *Support* > *Downloads* > *Autel Update Tools*

and install it on your computer.

## Software Update



**IMPORTANT:** Make sure the tablet is connected to the Internet and has sufficient battery or is connected to a power source.

- Tap the **Update** application button from the Diagnostics Job Menu and the Update screen will display.
- Check for all available updates:
  - a) if you want to update all the items, tap the **Update All** button;
  - b) if you want to update one or some of the items, tap the **Update** button on the right column of the specific item(s).
- Tap **Pause** to suspend the updating process. Tap **Continue** to resume.
- When the updating process is completed, the software will be installed automatically. The previous version will be replaced.

## MaxiVCI Mini Firmware Update

- Connect the MaxiVCI Mini to a computer using a USB cable.
  - Run the **PC Suite** software on the computer. This was installed along with the installation of the **Maxi PC Suite** software.
  - Click the **MaxiVCI Mini** icon on the **Device Selection** window.
  - The driver will automatically detect available update(s) for the device.
  - Click **Update** to complete the operation if an update is available.
- Or**
- Connect the MaxiVCI Mini to the tablet using a USB cable.
  - Tap **VCI Manager** from the Diagnostics Job Menu, and then tap **Update** to complete the operation if an update for the MaxiVCI Mini is available.

## Wireless Data Printing

### Print via PC



**IMPORTANT:** Make sure the tablet is connected to the same network as the computer, either via Wi-Fi or LAN, and that the computer is connected to a printer.

1. Run the **MaxiSys Printer** on the computer. This was installed along with the installation of the **Maxi PC Suite** software.
2. Click **Test Print** to make sure the printer is working properly.
3. Tap **Print** on the toolbar of the tablet. A temporary document will be created and sent to the computer.
  - If the **Auto Print** option in the MaxiSys Printer is selected, the MaxiSys Printer will print the received document automatically.
  - If the **Auto Print** option is not selected, click **Open PDF File** to view all the temporary files. Select the file(s) you want to print and click **Print**.

### Print via APP

If a Wi-Fi printer is available, please purchase a Wi-Fi printer APP and install it onto your tablet. To print a file, simply click on the **Print** button of a saved file on the tablet.

For service and support, please contact us.

---

<http://pro.autel.com> / [www.autel.com](http://www.autel.com) / [www.maxitpms.com](http://www.maxitpms.com) | [support@autel.com](mailto:support@autel.com) / [supporttpms@auteltech.com](mailto:supporttpms@auteltech.com)  
0086-755-2267-2493 (China HQ) / 1-855-AUTEL-US (288-3587) (North America) / 0049 (0) 6103-2000520 (Europe) /  
+045 5948465 (APAC) / +971 585 002709 (IMEA)

© Autel Intelligent Technology Corp., Ltd. All Rights Reserved.